


Steering Wheel Control Interface for Volvo Vehicles

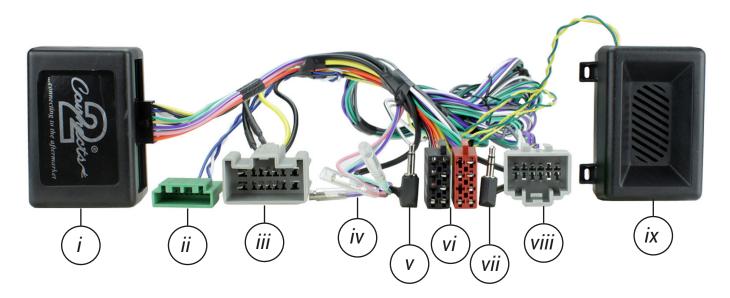

i. Interface Box

ii. Volvo CAN Data Connector

iii. Vehicle Specific Power Connector

iv. Additional Wiring Outputs

v. OEM Microphone Retention

vi. ISO Power/Speaker Connector

vii. OEM Aux Retention

viii. Volvo Speaker Connector

ix. Speaker Module



APPLICATION ____

Note: Application data is subject to change at any time

Volvo S80 2006 - 2011 Volvo V70 2007 - 2011 Volvo XC70 2007 - 2011

FEATURES

- Retains Factory Steering Wheel Control Functionality
- Retains Factory Phone Button Functionality
- Retains Warning Chimes/Parking Sensor Audio
- Provides Outputs for Park Brake, Reverse Gear and Speed Pulse
- Software Updatable (contact supplier for more information)

DISCLAIMER

The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are used during the installation to avoid damage to the vehicle or product.

Connects2 can not be held responsible for the installation of this product.

WIRING KEY

IN ISO CONNECTOR

Purple Right Rear Speaker + Purple/Black Right Rear Speaker -Green Left Rear Speaker + Green/Black Left Rear Speaker -Right Front Speaker + Grey Grey/Black Right Front Speaker -Left Front Speaker + White Left Front Speaker -White/Black


Yellow Permanent 12V
Black Ground
Red Ignition 12V
Orange Illumination

ADDITIONAL CONNECTIONS

Pink Speed Pulse Green Park Brake Purple/White Reverse Gear

STEERING WHEEL CONTROL FUNCTIONALITY

The following diagram, though based on careful research, is an example only Individual steering wheel control configurations may differ.

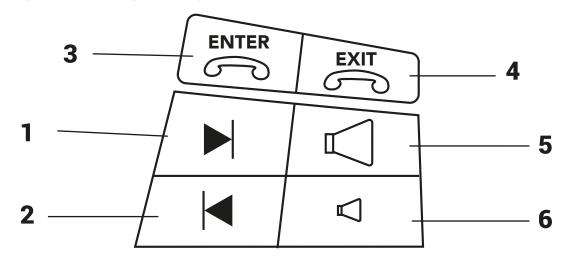

- 1. Track Up
- 2. Track Down
- 1&2. Source (Hold Both)
- 3. Pick Up

- 4. Hang Up
- 5. Volume Up
- 6. Volume Down
- 5&6. Mute (Hold Both)

Before installing the interface, the factory stereo must be removed and disconnected. To do this, please consult the vehicle owner's manual/handbook or contact a fitting professional.

A stereo connection (patch) lead is also required for the installation of this interface (supplied seperately). Please ensure that you have the correct lead before proceeding. For universal patch leads, prepare the wiring loops in accordance with the instruction manual supplied with the product before installation.

- 1. Connect the 12 Pin connector from the stereo connection (patch) lead to the interface box
- 2. Connect the opposite end of the stereo connection (patch) lead to the steering wheel control input on the back of the aftermarket stereo

NOTE: This may be a 3.5mm jack connector or a wired input depending on the brand of aftermarket stereo being fitted. Please consult the aftermarket stereo installation manual for further information on where to make the connection

- IMPORTANT: THIS STEP MUST BE COMPLETED BEFORE CONNECTING POWER TO THE INTERFACE.

 FAILURE TO DO SO MAY RESULT IN A LACK OF FUNCTIONALITY AND THE NEED TO REINSTALL THE PRODUCT
- 3. Connect the 14 Pin connector from the supplied wiring loom + 2-pin speaker wire to the interface box
- 4. Connect the power/speaker ISO connector to the power/speaker ISO connector at the rear of the aftermarket stereo

NOTE: For aftermarket stereos which <u>do not</u> have an ISO connector, please see "Wiring Key" on Pg.2 for information on which wires to connect. Some interfaces may also have additional 'flying' wires which can be connected to the vehicle to support various features ie. parking brake trigger, reverse gear and speed pulse. Details of these can be found under 'Additional Connections'.

- 5. Connect the additional flying wires to the aftermarket head unit's wiring harness as required
- 6. Connect the 3.5mm jack connectors to the back of the aftermarket head unit to retain the vehicle's OEM Aux input and Microphone
- 7. Connect the Speaker connector to the vehicles OEM connector (for these models, the non-amplified speaker terminal is located within the dash)
- 8. Connect the CAN Data connector to the vehicles OEM connector
- 9. Connect the vehicle specific power connector on the supplied harness to the OEM connector from the vehicle
- 10. Test stereo and steering wheel control functionality for correct operation before reassembling the vehicle dashboard. If steering wheel control functions are unresponsive, please uninstall the interface and wiring and reinstall carefully in accordance with the above steps

For further help and support, please contact us directly at support.connects2.com/tickets/technical and fill out a support ticket with the full details of your issue.

WIRING DIAGRAM

