

Telit RoadStar Car Phone Installation Guide





989889789789 Rev.2 - 2012-04-01

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Notice

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

Copyrights

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

Computer Software Copyrights

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.



989889789789 Rev.2 - 2012-04-01

Usage and Disclosure Restrictions

License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

Copyright © Telit Communications S.p.A. 2011.



989889789789 Rev.2 - 2012-04-01

Table of Contents

1. Car Phone Kit	5
2. Installation Diagram	7
3. Car Phone Layout	8
4. Preplanned Accessory Positioning	. 10
4.1. Plan Phone and Cradle Positions	. 10
4.2. Plan the Microphone's Position	. 11
4.3. Plan the Speaker's Position	. 11
5. Installation	. 12
5.1. Installing the Cradle and Phone	. 12
5.2. Installing the Microphone	. 14
5.3. Installing the Speaker	. 15
5.4. Installing the Electrical Connections	. 16
5.5. Installing RF Antenna	. 18
5.6. Installing GPS Antenna	. 20
5.7. Installing the SIM card	. 22
6. Trouble Shooting	. 23
Appendix	. 24



989889789789 Rev.2 - 2012-04-01

1. Car Phone Kit

In box Parts	Description
Car phone unit	
Speaker	
Microphone	
Power supply and fuse Cables	- BO & S
Cradle with screws	




989889789789 Rev.2 - 2012-04-01

Optional Parts	Description	
RF antenna		
	This High Efficiency Omni directional Antenna is designed for inside glass mount installations operating in the 800MHz cellular, 900 MHz trucking, 1800 MHz DCS, 1900 MHz PCS and 2100 MHz UMTS bands using included 3M /5M adhesive and supplied with 3M /5M cable and SMA male connector.	
GPS antenna	GPS active antenna	
External Auxiliary (Optional)	Auxiliary is not supplied part of the car kit. It's an optional accessories and can be provided separately.	



989889789789 Rev.2 - 2012-04-01

2. Installation Diagram

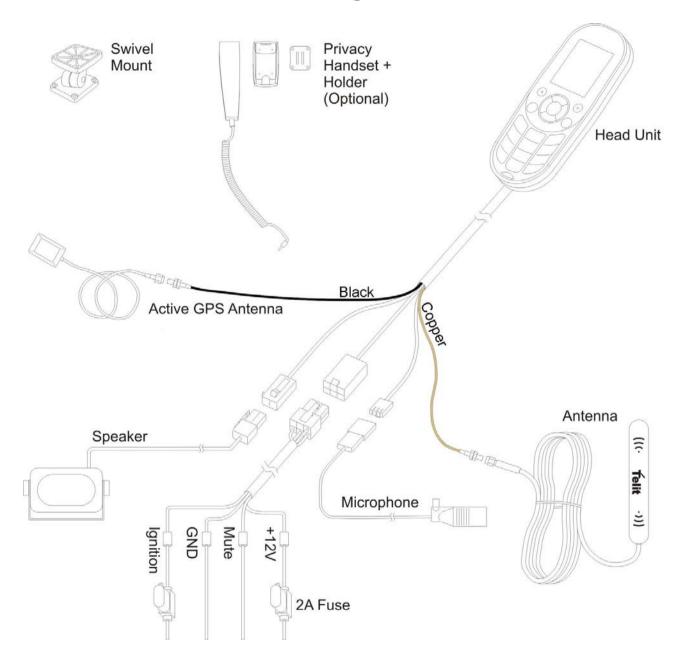



989889789789 Rev.2 - 2012-04-01

Car Phone Layout 3.





989889789789 Rev.2 - 2012-04-01





989889789789 Rev.2 - 2012-04-01

4. Preplanned Accessory Positioning

Positioning of all accessories must be planned in advance before installation begins.

- Ensure that no wire braids go through locations where Phone accessories are to be installed.
- Ensure that any parts of the handsfree Phone will not interfere with the vehicle or its accessories' operation

4.1. Plan Phone and Cradle Positions



Note

The best way to determine the Phone's position to the customer's full satisfaction is to locate it when the customer is beside you and obtain his/her approval.

Please ensure the Phone's location does not interfere with the vehicle or its
accessories operation: it should not interfere with opening the glove
compartment or ashtray, should not prevent access to the lighter, moving the
gear stick, operating the hand break etc.



Warning!

Do not install the Phone in front of the vehicle's air bag. This restriction must be adhered to, as in the case of an emergency the air bag blows up and can fail to work properly.

- Ensure the surface on which this Phone is installed is sufficiently strong to carry the weight and pressure which would be exerted on it.
- When selecting the Phone's location, please ensure the control cable connected to it does not interfere with the vehicle or its accessories' operation.
- Ensure it is safe and convenient to operate the Phone and read the display from the driver's seat.
- Ensure the Phone would be protected from direct sunlight and humidity (air conditioner openings).
- Ensure the Phone would be protected from mechanical damage by the car's accessories.





989889789789 Rev.2 - 2012-04-01

4.2. Plan the Microphone's Position

- Install the handsfree Phone's microphone 30-40 cm away from where the driver speaks when he/she is in their normal driving position.
- It is recommended to install the microphone inbetween car roof and windscreen glass and away from external sources of noise.
- Install the microphone in a different direction than the speaker so as to avoid echo.

4.3. Plan the Speaker's Position



Note!

The speaker and microphone (installed in between car roof and windscreen glass above the driver) must face different directions.



Do not hide the speaker inside the dash board. If you cover it, sound quality will be lowered.

Note!

 Locate the speaker at the right side of the main console, at the front of the console, in a location where it would not bother the driver or passengers but would sound best.



989889789789 Rev.2 - 2012-04-01

5. Installation

5.1. Installing the Cradle and Phone







Carphone unit

Cradle

Adjustable bracket

5.1.1. Where to Position



The best way to determine the Phone's position to the customer's full satisfaction is to locate it when the customer is beside you and obtain his/her agreement.

Note!

 Please ensure the Phone's location does not interfere with the vehicle or its accessories operation: it should not interfere with opening the glove compartment or ashtray, should not prevent access to the lighter, moving the gear stick, operating the hand break etc.



Warning!

Do not install the Phone in front of the vehicle's air bag. This restriction must be adhered to, as in the case of an emergency the air bag blows up and can fail to work properly.

- Ensure the surface on which this Phone is installed is sufficiently strong to carry the weight and pressure which would be exerted on it.
- When selecting the Phone's location, please ensure the control cable connected to it does not interfere with the vehicle or its accessories' operation.
- Ensure it is safe and convenient to operate the Phone and read the display from the driver's seat.





989889789789 Rev.2 - 2012-04-01

- Ensure the Phone would be protected from direct sunlight and humidity (air conditioner openings).
- Ensure the Phone would be protected from mechanical damage by the car's accessories.

5.1.2. Installing the Cradle and Phone

- 1. Disassemble the cradle into its two parts.
- 2. Install one of the cradle parts in the determined location in the car with 4 tin screws.



If you are not able to locate the cradle properly, please use a adjustable bracket from the station inventory.

Note!

3. Install the second cradle part on the handsfree Phone, using the 4 philips screws provided with this kit.



Only use the original screws provided with this kit.


Note!

- 4. Connect the two cradle parts.
- 5. Direct the control cable coming out of the Phone behind the car panel.



989889789789 Rev.2 - 2012-04-01

5.2. Installing the Microphone

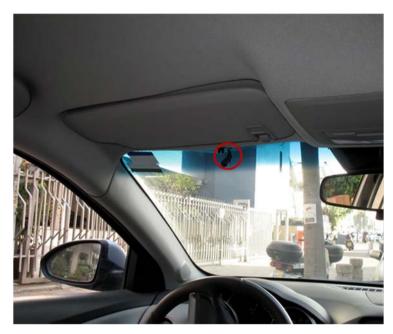

The microphone is provided with a clip which makes it possible to install it in between the car roof and windscreen glass.

5.2.1. Where to locate the Microphone

- Install the handsfree Phone's microphone 30-40 cm away from where the driver speaks when he/she is in their normal driving position.
- It is recommended to install the microphone in between car roof and windscreen glass and away from external sources of noise.
- Install the microphone in a different direction than the speaker so as to avoid echo, and ensure there is a distance of at least 1.5 meters between them.

5.2.2. Installing the Microphone

- 1. Using the clip, install the microphone inbetween the car roof and windscreen glass.
- 2. Direct the microphone cable along the roof, behind it, so as not to be seen.
- 3. Continue directing the microphone cable along the left beam on the driver side.
- 4. Direct the cable under the dash board to the connection point of the cable with the control cable connected to the Phone.



Reproduction forbidden without written authorization from Telit Communications S.p.A. - All Rights Reserved. Page 14 of 24



989889789789 Rev.2 - 2012-04-01



Note!

Ensure the microphone and antenna cables are kept away from each other.

Ensure the microphone cable is not in contact and does not interfere with the car pedals and steering wheel stick.

5. Connect the microphone cable plug to the correct port on the control cable.

5.3. Installing the Speaker



5.3.1. Where to Locate the Speaker



The speaker and microphone (installed in between the car roof and windscreen glass above the driver) must face **different directions**.

Note!

If the speaker and microphone face each other, this will cause echo.



Do not hide the speaker inside the dash board.

If you cover it, sound quality will be lowered.

Note!

 
 Locate the speaker at the right side of the main console, at the front of the console, in a location where it would not bother the driver or passengers but would sound best.



989889789789 Rev.2 - 2012-04-01

5.3.2. Installing the Speaker

- 1. Install the speaker at the right side of the main console, at the front of the console.
- 2. Disassemble the screws connecting the speaker to the hanger.

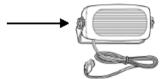

- 3. Install the hanger using the 2 tin screws.
- 4. Direct the speaker cable behind the mat located at the bottom of the car.
- Ensure the cable does not interfere with the vehicle or its accessories' operation.
- 6. Ensure the speaker cable is not exposed to damage by the passengers.

5.4. Installing the Electrical Connections

The electrical cable is provided separately from the control cable. Before installation begins, connect the four leads (which include the 2A fuses) using a red or blue crimp sleeve as appropriate.



Please note sharp edges or moving parts which may damage the wires.

The value for the fuses provided with the kits must not be changed.

The kit is appropriate only for a 12V vehicle.

In case of converting any other kit model into this kit, please change the power cable.

Warning!

The electrical cables should be directed as follows:

- So as not to disturb the driver or passengers.
- So as not to pass near the car's sharp or moving parts.



The external voltage connection is located under the dash board or close to the fuse box (depending on the car model).

In new vehicles a cellular phone connection can be found near the fuse box. See the car's user's manual under Info.


Note!

Only use the kit's original fuses (250V / 2A).



989889789789 Rev.2 - 2012-04-01

5.4.1. Installing the Voltage Cable

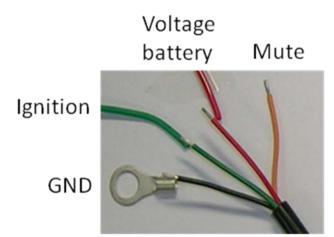

The following chart covers the manner by which the voltage cable should be connected to the car's electrical system.

Wire Color	Function	Must be connected to	Ensure
Red Includes fuse case	To provide the handsfree Phone with fixed voltage	12V fixed voltage An additional fuse case is provided which must be connected to a fixed voltage source (+)	Ensure a 250V / 2A fuse is used
Black	To provide a fixed minus (-)	Car body (minus)	Ensure the connection point is on the car body only. Use a cable shoe, tin screw and springy disc.
Green Includes fuse case	To turn on the cellular phone after switching the ignition on and turn it off after car ignition is switched off.	12V-24V Ignition voltage	Determine the correct point with a voltmeter Ensure a 250V / 2A fuse is used.



989889789789 Rev.2 - 2012-04-01

5.5. Installing RF Antenna

5.5.1. Where to Locate the Antenna

- The preferred location for the antenna is on the right side of the windshield.
- If other communication system is installed in the car, please locate the antenna as far as possible from the other phone antenna. Recommended distance is 30cm.



Some car vendors (such as Renault) feature a radiation filter on the windshield. Therefore it is necessary to install the antenna on a side or back window.

Note!




Note!

In vehicles with air bags on the beam where the antenna cable passes, the antenna cable should be directed behind or beside the airbag.

5.5.2. Installing the Antenna

- 1. Thoroughly clean the location intended for installation using a cloth and detergent. Allow the spot to dry before you continue
- 2. Carefully remove the protective film from the 3M adhesive
- 3. Locate the antenna on the cleaned location.
- 4. Carefully press the antenna toward the window. Ensure all corners of the antenna are attached to the window. Chose the mounting position on the vehicle windshield according to bellow drawing.

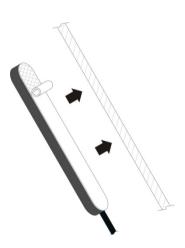




Please keep min. 20 mm distance from metal surface.

Note!



989889789789 Rev.2 - 2012-04-01

5.5.3. Possible positions

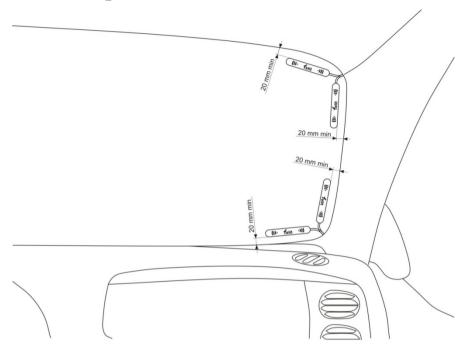

5.5.4. Installing the Coaxial Cable

- 1. Direct the antenna's coaxial cable along the car beam. Ensure the antenna cable does not get damaged.
- 2. When completing the cables installation and reaching close to the device coaxial cables SMA female connector attach both connectors together.
- 3. Roll the remaining cable.
- 4. Examine the antenna and cables properly installed.

Mod. 0810 2011-07 Rev.2



989889789789 Rev.2 - 2012-04-01

5.6. Installing GPS Antenna

5.6.1. Where to Locate the Antenna

 The preferred location for the antenna is on the bottom right side of the dashboard



In vehicles with air bags on the beam where the antenna cable passes, the antenna cable should be directed behind or beside the airbag.

Note!

5.6.2. Installing the Antenna

- 1. Thoroughly clean the location intended for installation using a cloth and detergent. Allow the spot to dry before you continue.
- 2. Carefully remove the protective film from the 3M adhesive
- 3. Locate the antenna on the cleaned location.
- 4. Carefully press the antenna toward the dashborad. Ensure all corners of the antenna are attached to the dashboard.



989889789789 Rev.2 - 2012-04-01

5.6.3. Possible positions



5.6.4. Installing the Coaxial Cable

- 1. Direct the antenna's coaxial cable along the car beam. Ensure the antenna cable does not get damaged.
- 2. When completing the cables installation and reaching close to the device coaxial cables SMA female connector attach both connectors together.
- 3. Roll the remaining cable.
- 4. Examine the antenna and cables properly installed.



989889789789 Rev.2 - 2012-04-01

5.7. Installing the SIM card

See SIM card installation position:





Insert the SIM card when the phone is off.

Note!



989889789789 Rev.2 - 2012-04-01

6. Trouble Shooting

Symptom	What to Check	What to Do
No reception	Check whether connector is correctly connected to the cable – use an efficiency meter	Replace connector
	Check if internal and external antenna base is correctly attached	Attach antenna base
	Check proper working order of antenna cable	Replace antenna cable
Other party	Check speaker's proper working order	Replace speaker
cannot be properly	A Phone problem may exist	Replace Phone
heard	Check speaker location	Change location
User is not heard by the other party	Check microphone and contacts	Tighten microphone connector to the Phone
, , ,	Check routing of microphone cable	Change routing of microphone cable
	Check microphone's proper working order	Replace microphone
	A Phone problem may exist	Replace Phone
Noise is heard	Ask whether noise always occurs in specific geographical areas	Explain that reception trouble sometimes occurs in transition between coverage areas
	Ask whether noise occurs when window is open	Explain that the Phone is an amplifying system that receives all environmental noise, and therefore it is preferable to speak with a closed window
	Check whether microphone and antenna are installed on the same side	If they are, install microphone as per the instructions
	Check whether eye contact exists between speaker and microphone	If it does, change location accordingly
	Check for improper voltage connection – check whether voltages are connected as per instructions	Change voltage source in accordance with instructions
Phone switches on	Check minus (-) connection	Black wire: connect minus to car body
and off by itself	Check voltage contacts	Tighten loose contacts
Phone switches on and off by itself	Check fuse. Check connection to voltage source (green cable)	Replace fuse. Tighten connection to voltage source. Ensure a 250V / 2A fuse is used
Phone does not switch off after switching off car	Check connection to power source (green cable)	Tighten connection to power source

Mod. 0810 2011-07 Rev.2



989889789789 Rev.2 - 2012-04-01

Appendix

Finding IMEI code

1. Type code *#06#