




1. Unclip and remove OEM panel (see arrow)



2. Remove 3 screws (see arrows)

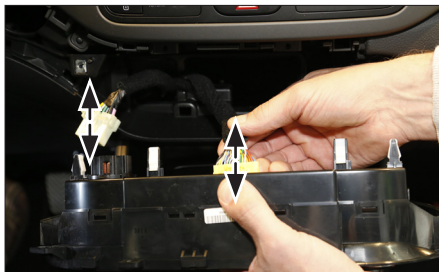

3. Pull air condition control unit towards your direction
Unplug cables carefully



4. Remove 2 screws located under OEM head unit (see arrows)




5. Pull OEM panel toward your direction carefully




6. Unplug cables of OEM panel carefully
Remove OEM panel



7. Remove 4 screws of OEM head unit (see arrows)

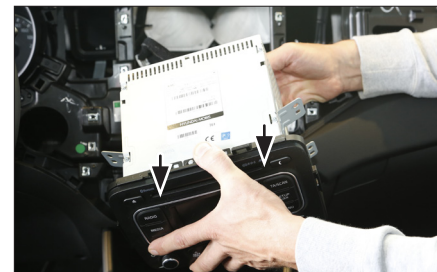

8. Unplug cables carefully and remove OEM head unit

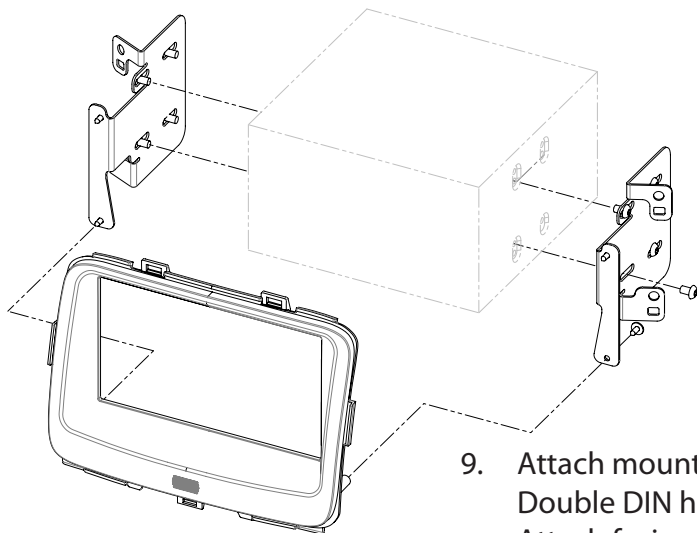

9. Attach mounting brackets to Double DIN head unit
Attach facia plate to mounting brackets



10. Connect all required circuit points
place Double DIN head unit on dash board



11. Install everything in reverse order
to finish installation