


ZDAPGM1


SOT Cable

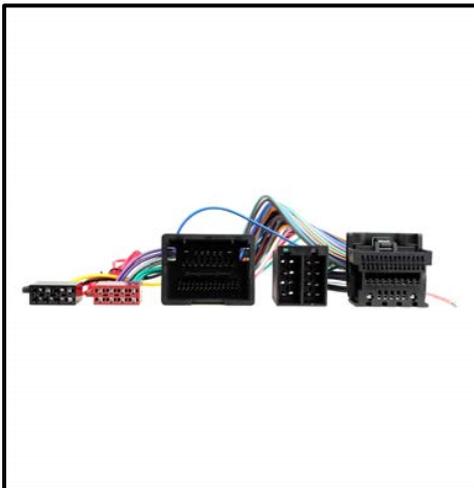

ZDA4.6



ZDAISOT2

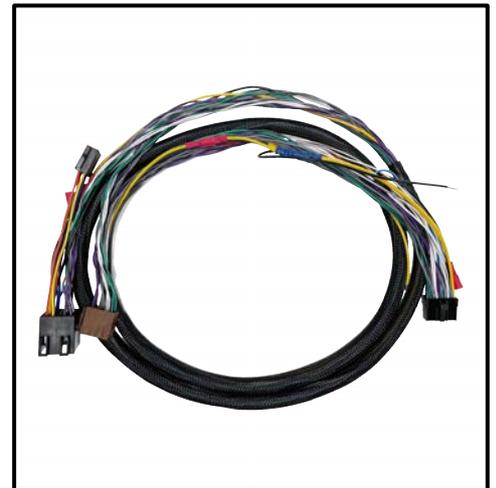

Installation Tools Required


Vehicle used for installation:*

Opel Astra J 03/2015


Basic Sound System

**Some differences may occur between different car and year models.*


PZ2 Screwdriver

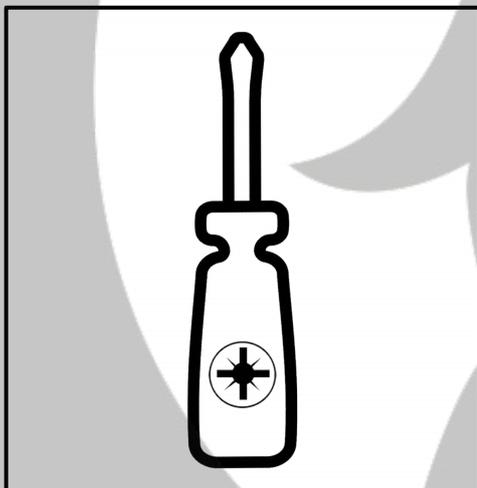

7mm Wrench

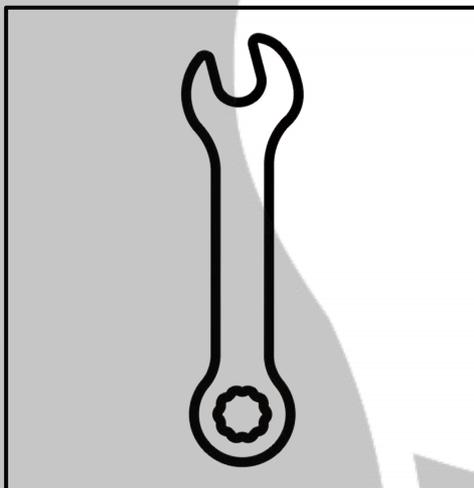

Plastic Pry Tool

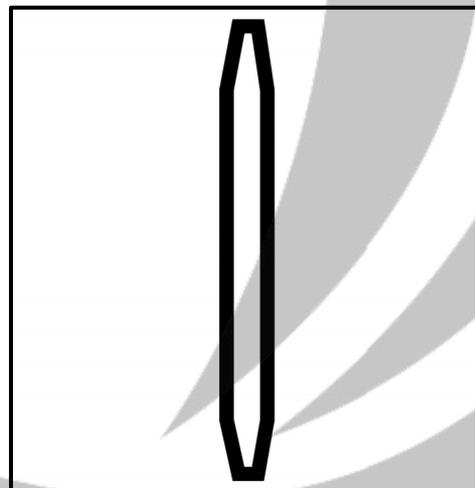

PHOENIX GOLD

ZDAPGM1 Installation 1

Tools required:



1x Plastic Pry Tool

1. Stereo removal



2. Pull up the gear lever panel



3. Pull up and put away the panel



4. Remove the top of the tray



ZDAPGM1 Installation 2

Tools required:




1x PZ2 Screwdriver



1x Plastic Pry Tool

5. Pull up the plastic tray

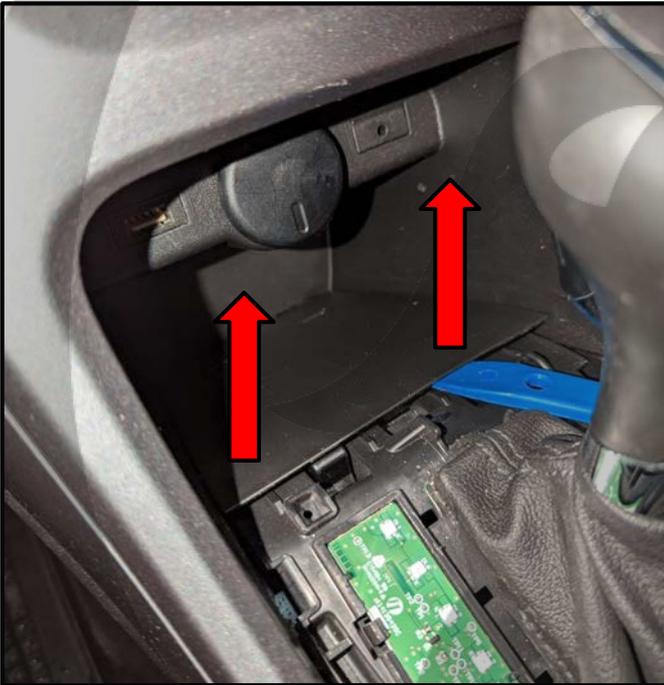


6. Pull up the gear lever panel



7. Unscrew the two screws



8. Unscrew the first screw

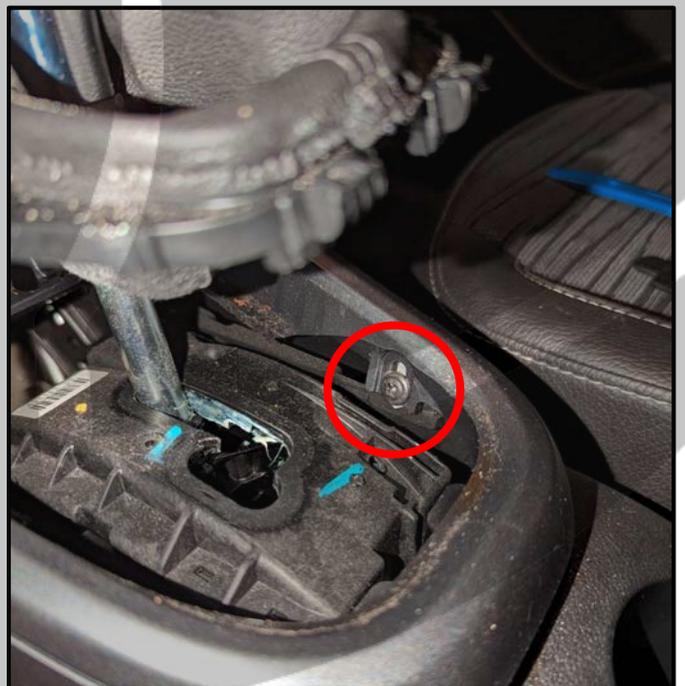

ZDAPGM1 Installation 3

Tools required:



1x PZ2 Screwdriver



1x Plastic Pry Tool

9. Unscrew the other screw




10. Pull off the bottom part



11. Pull off the top part



12. Pull the entire stereo panel off

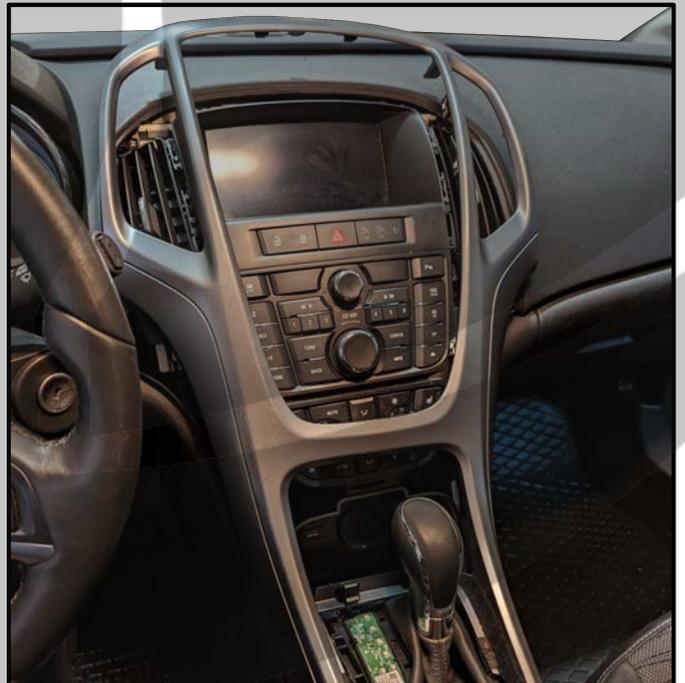


ZDAPGM1 Installation 4

Tools required:




1x Plastic Pry Tool

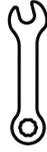


1x 7mm Wrench

13. Loosen the left fan wheel panel

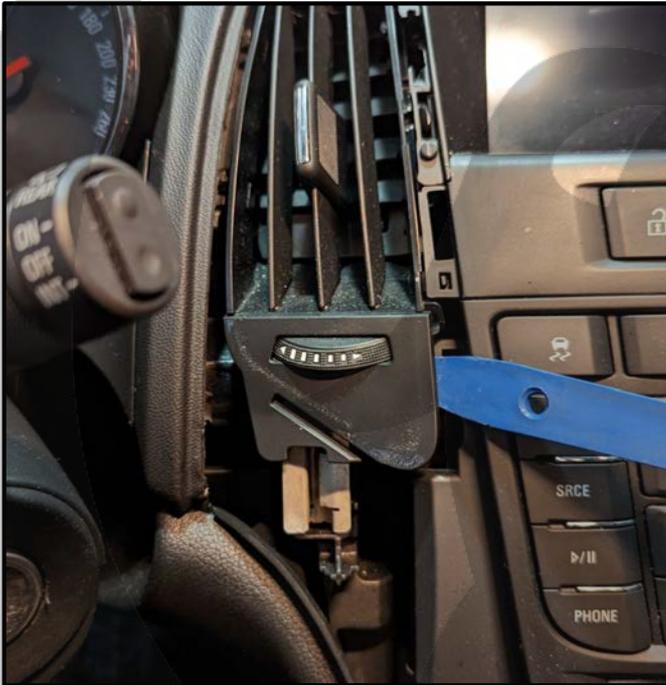


14. Loosen the right fan wheel panel

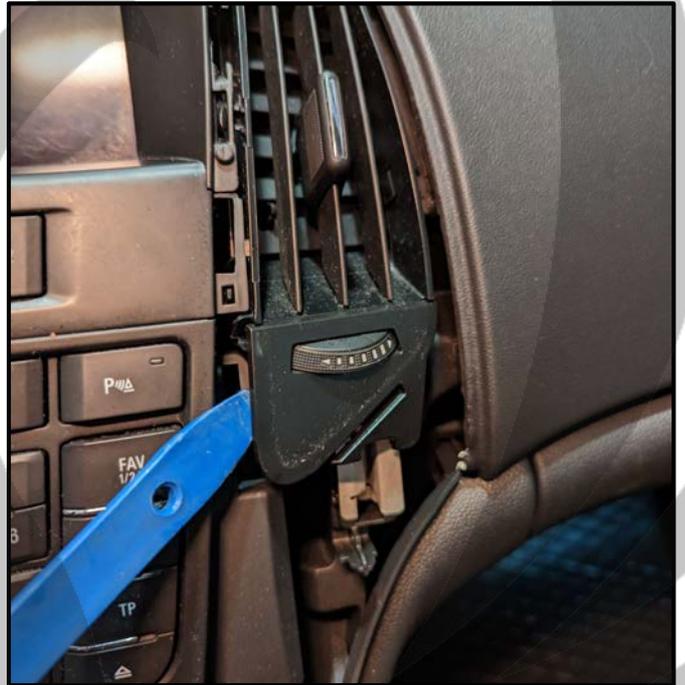

15. Unscrew the four bolt



16. Pull out the panel

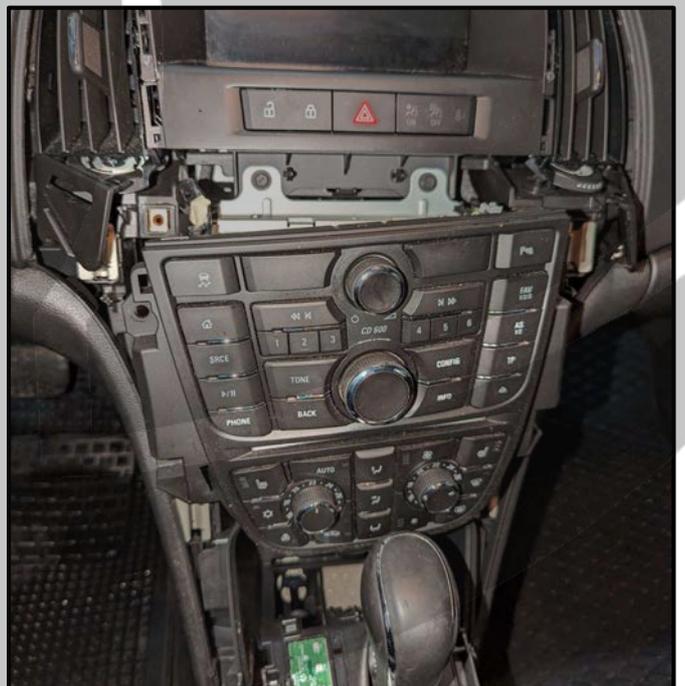

ZDAPGM1 Installation 5

Tools required:


17. Remove the black connector




18. Remove the grey connector



19. Remove the other two connectors

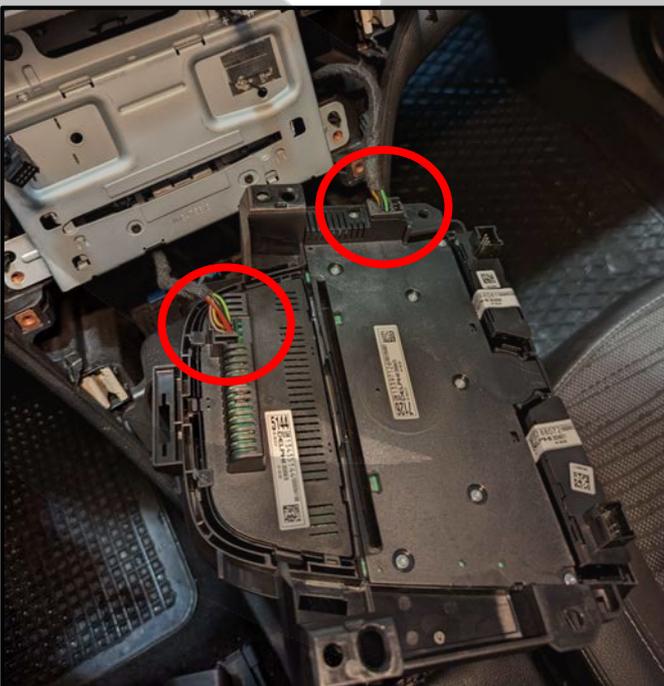

20. Remove the first connector

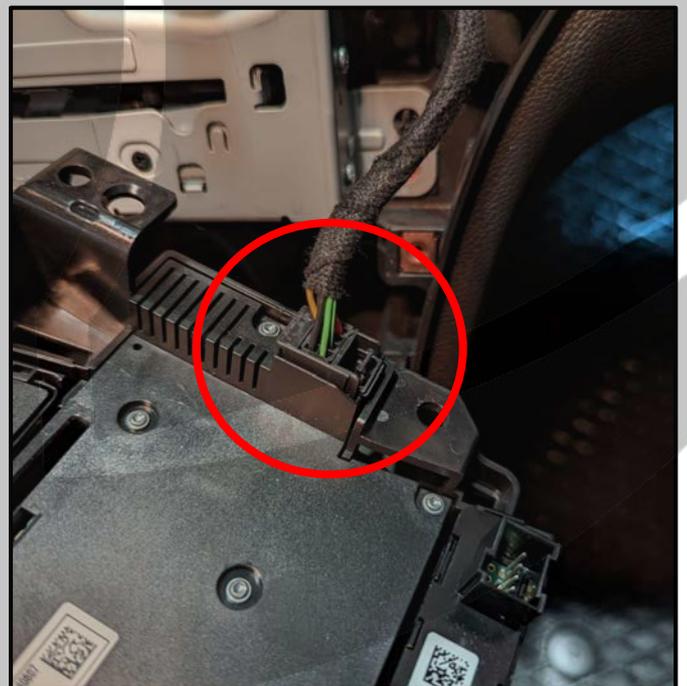


ZDAPGM1 Installation 6

Tools required:




1x 7mm Wrench

21. Remove the other connector

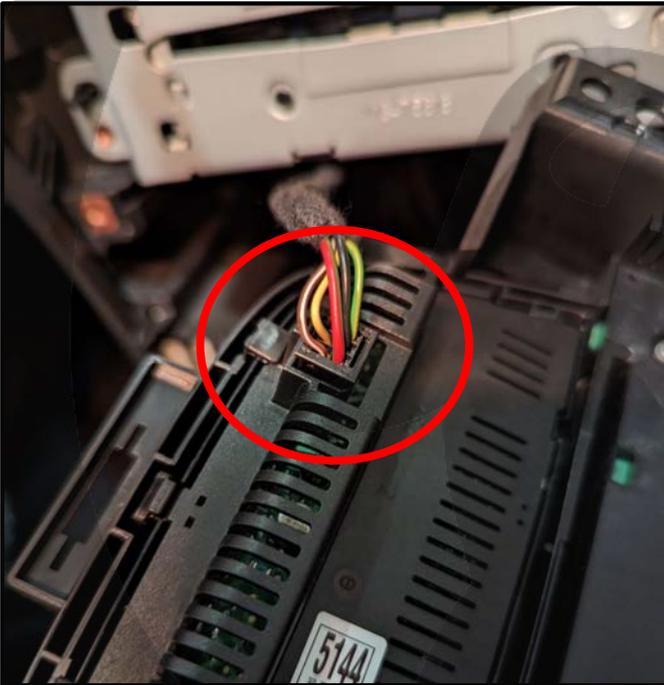


22. Unscrew the two bolts

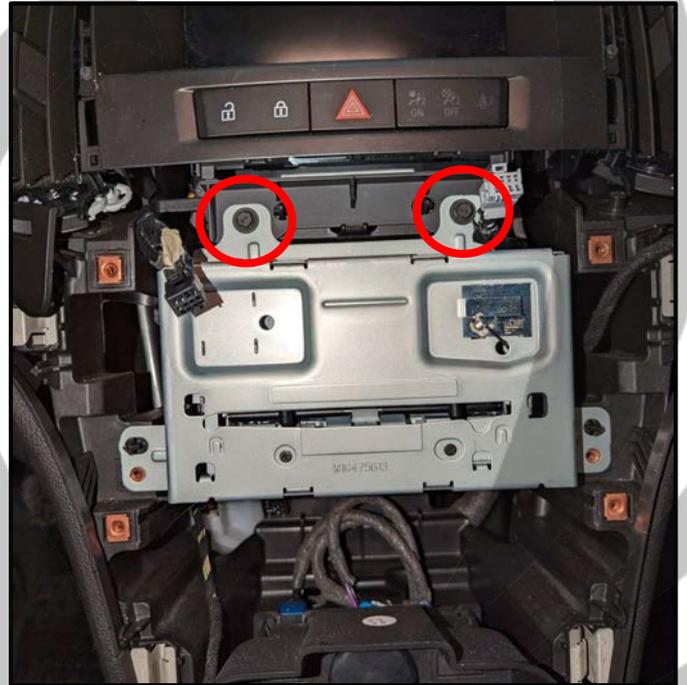

23. Pull out the stereo



24. Remove the quadlock connector

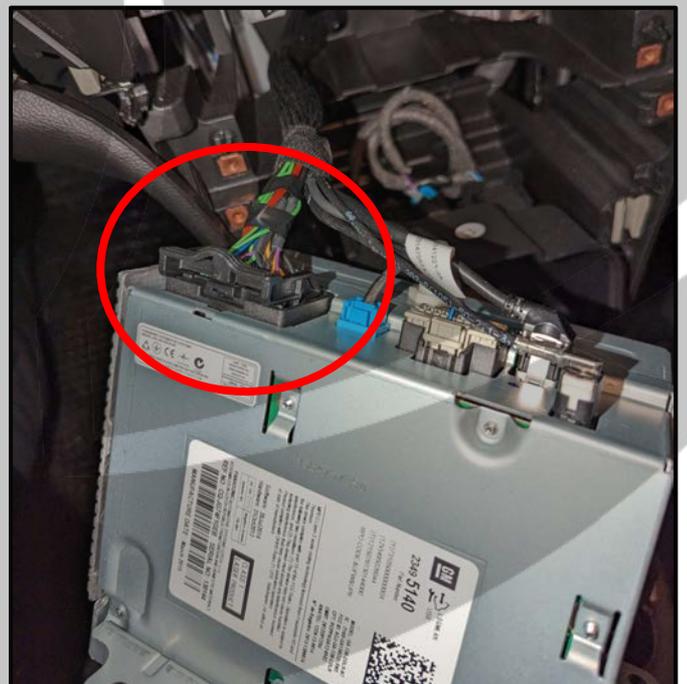

ZDAPGM1 Installation 7

Tools required:




1x ZDAISOT




1x SOT Cable

25. Quadlock connector removed

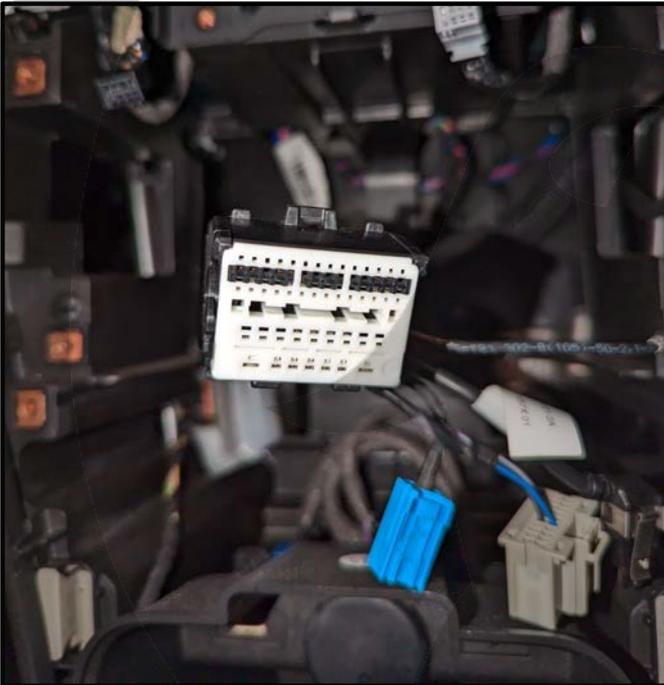

26. Connect the SOT cable

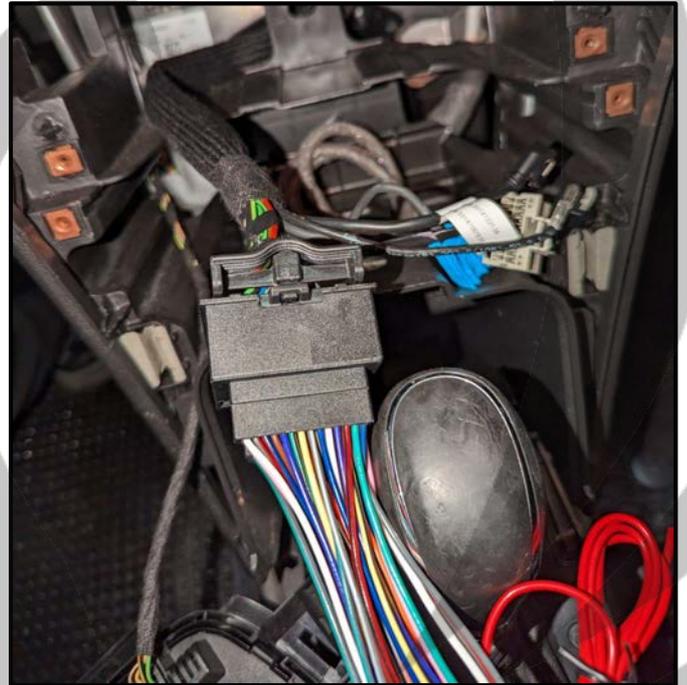

27. Connect ZDAISOT




28. Remove the passenger side panel




ZDAPGM1 Installation 8

Tools required:


29. Pull the panel towards you

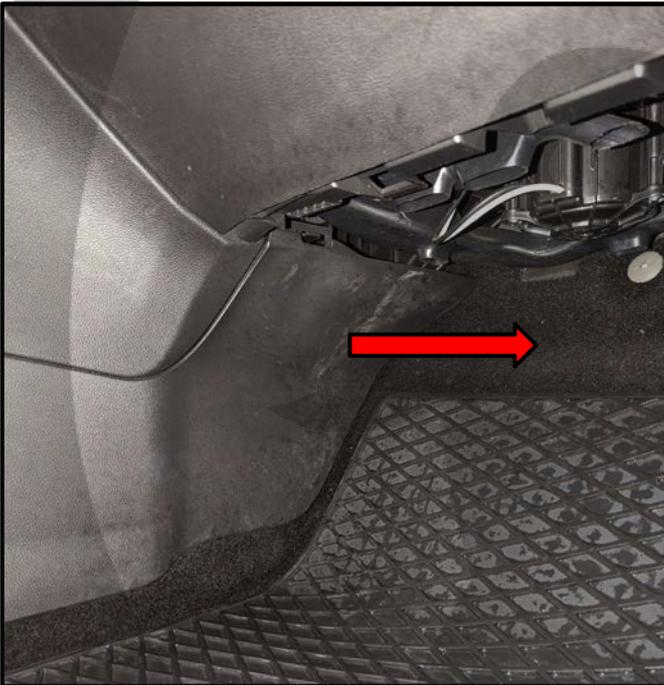


30. Put the panel aside

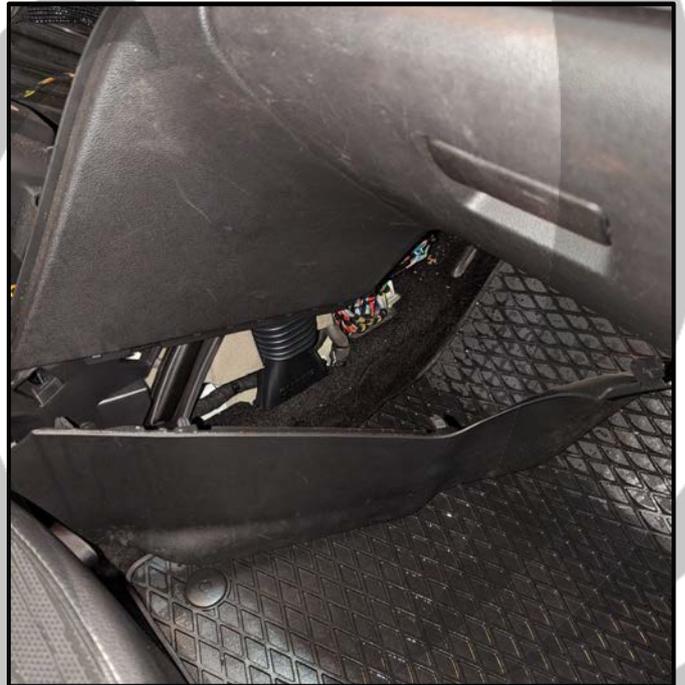

31. Route ZDAISOT behind the stereo

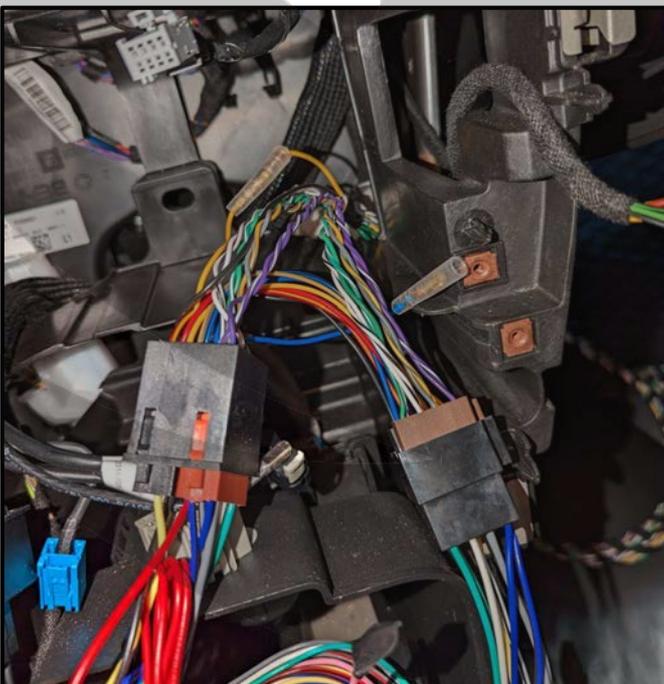

32. Route ZDAISOT to the floor

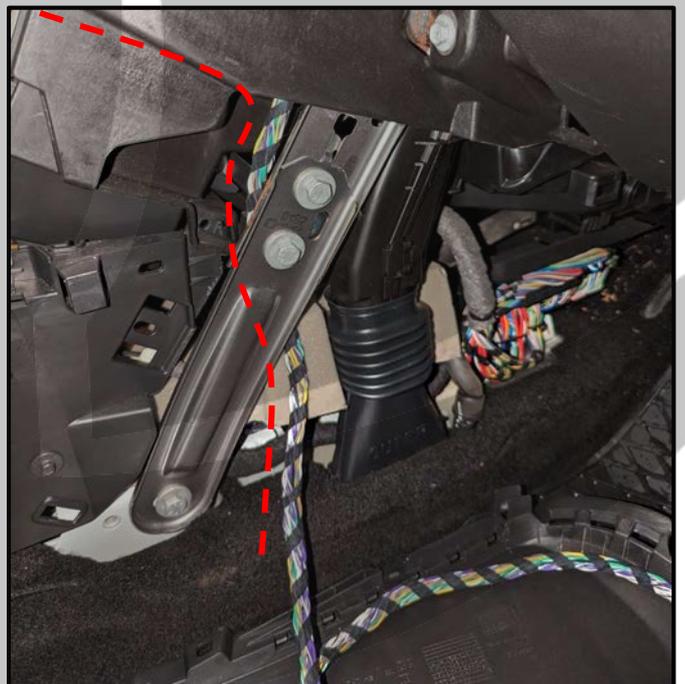

ZDAPGM1 Installation 9

Tools required:




1x ZDA4.6

33. Connect SOT cable to stereo



34. Route ZDAISOT under the carpet

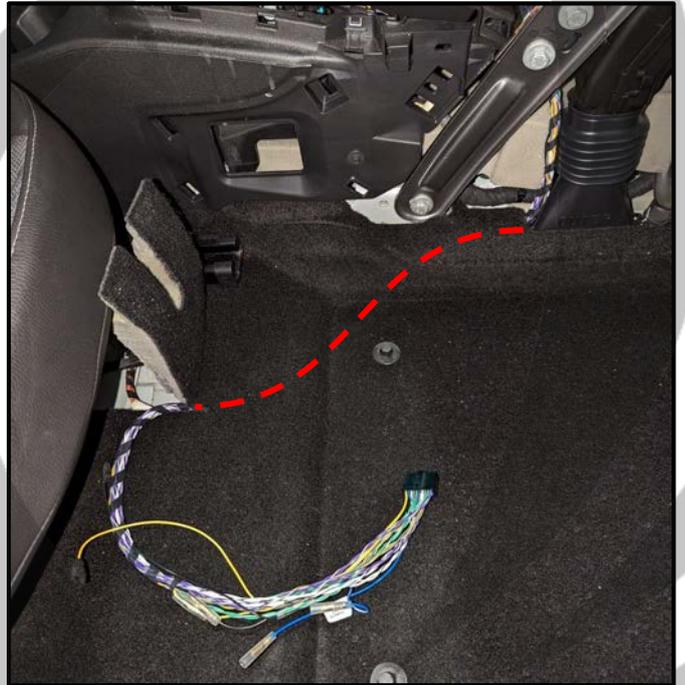

35. Install and screw ZDA4.6 in place



36. Screw back stereo




Software Installation 1

Tools required:




1x Computer


40. Press "Program"

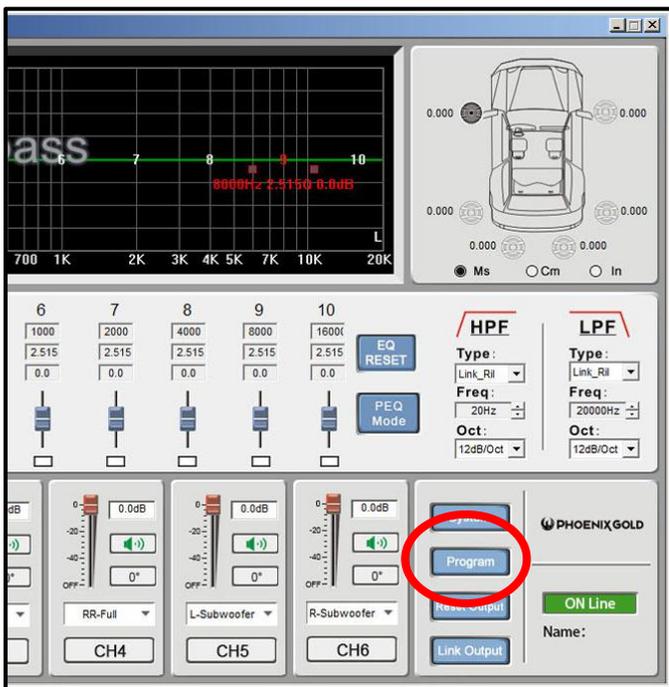

41. Press "Load PC Presets File"

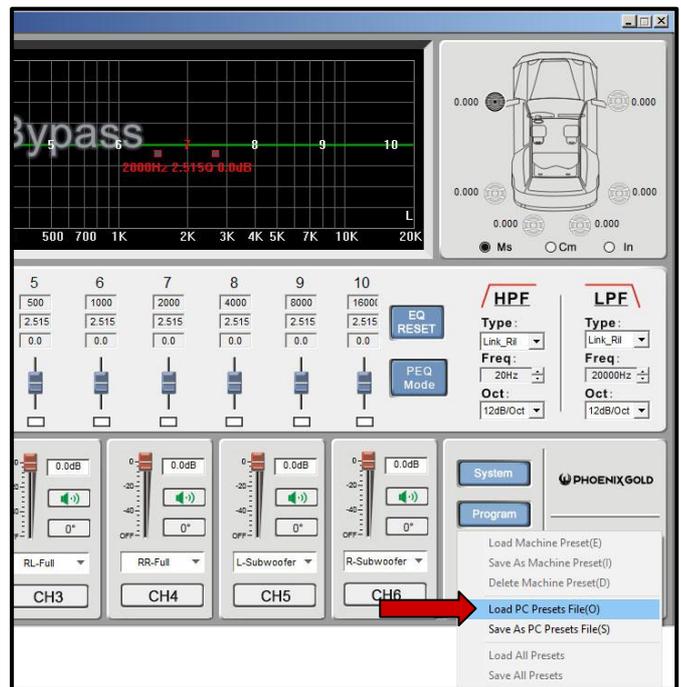

42. Go to your saved location and choose your Phoenix Gold sound curve, then click "Open"

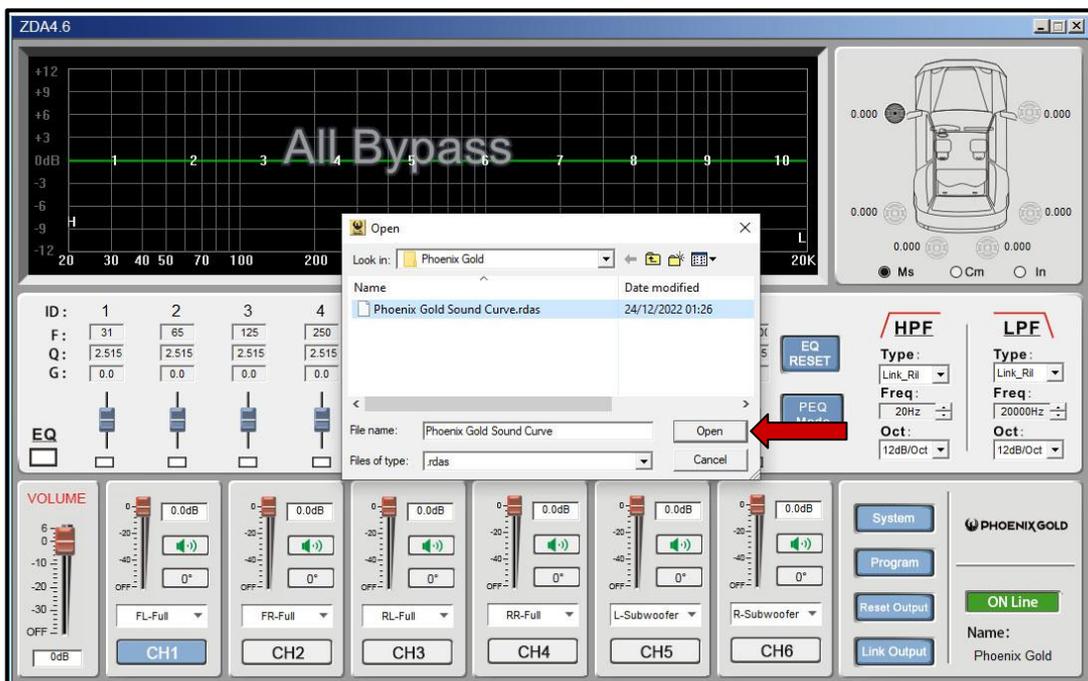

Software Installation 2

Tools required:



1x Computer

43. Press "Program"

The screenshot shows the Phoenix Gold software interface. The top left features a frequency response graph with a green line and a red dot at 8000Hz, 2.515Q, 0.0dB. The top right shows a car diagram with speaker levels. The middle section contains five EQ sliders (6, 7, 8, 9, 10) and HPF/LPF settings. The bottom section has volume controls for CH4, CH5, and CH6, and a 'Program' button circled in red. Other buttons include 'EQ RESET', 'PEQ Mode', 'Link Output', and 'ON Line'.

44. Press "Save As Machine Preset"

The screenshot shows the Phoenix Gold software interface with the 'Save As Machine Preset' menu open. A red arrow points to the 'Save As Machine Preset(I)' option. The menu also includes 'Load Machine Preset(L)', 'Delete Machine Preset(D)', 'Load PC Presets File(O)', 'Save As PC Presets File(S)', 'Load All Presets', and 'Save All Presets'. The 'Program' button from the previous step is now highlighted in blue.

45. Press "Save"

The screenshot shows the Phoenix Gold software interface with the 'Save As Machine Preset' dialog box open. The dialog box has a table with columns 'No.' and 'Preset'. The 'Save' button is highlighted with a red arrow. The background software interface shows the frequency response graph with the text 'All Bypass' overlaid. The car diagram and EQ settings are also visible.

No.	Preset
1	
2	
3	
4	
5	
6	


Software Installation 3

Tools required:



1x Computer

46. Press "OK". The sound curve is now installed and saved to the ZDA4.6.

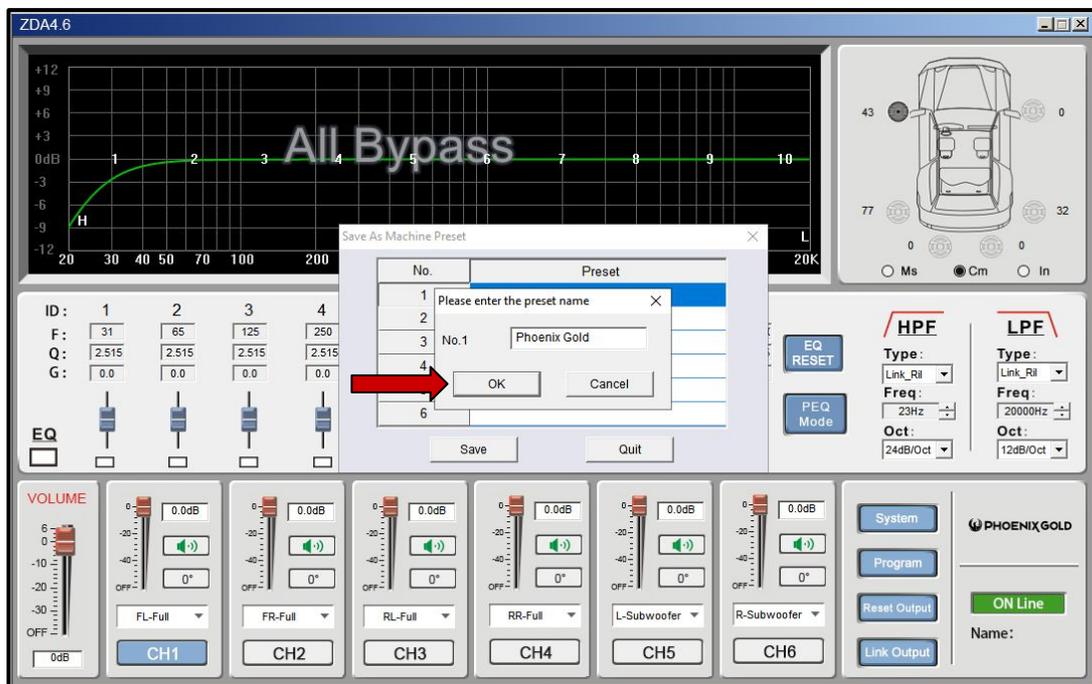

On Behalf of the Phoenix Gold team,
Thank you for choosing us!

Your installation is complete and we hope that your new upgraded system will bring you joy and happiness for many years to come when listening to your favorite music. As always, our goal is bringing you The Gold Standard in Sound.



www.phoenixgold-eu.com