

ZTSV65






Installation Tools Required

Vehicle used for installation:*


Volvo FH (2020 →) Basic Sound System

*Some differences may occur between different truck and year models.




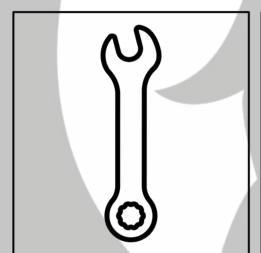

8mm Wrench or Socket

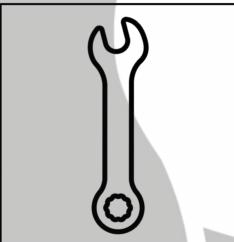



Plastic Pry Tool

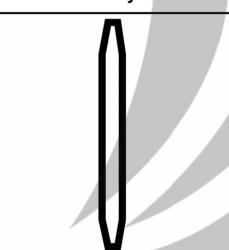

Drill


T25 Screwdriver

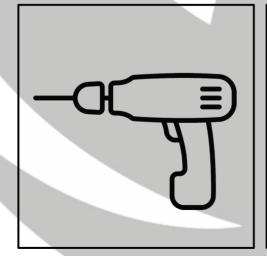

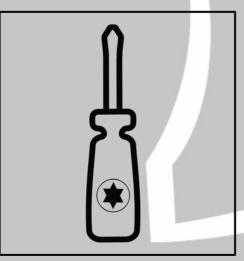



Tools required:



1. Front door panel removal



3. Disconnect the connector




2. Remove bottom light panel



4. Unscrew the bolt



Tools required:



5. Remove the cover panel



7. Pull up the cover panel



6. Unscrew the bolt



8. Unscrew the bolt



Tools required:



9. Remove the door handle panel



11. Pull up the window switch panel



10._ Unscrew the bolt



12. Disconnect the connector



Tools required:








1x 8mm Wrench

1x 10mm Wrench

1x Plastic Pry Tool

13. Remove the two bolts

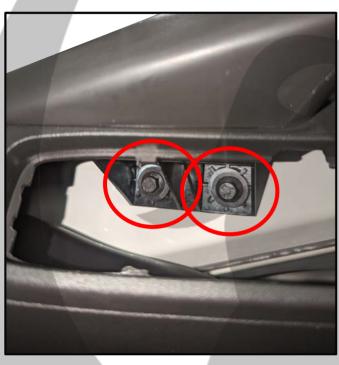


14. Unscrew the bolt



15. Pull off the door panel




16. Disconnect the connector

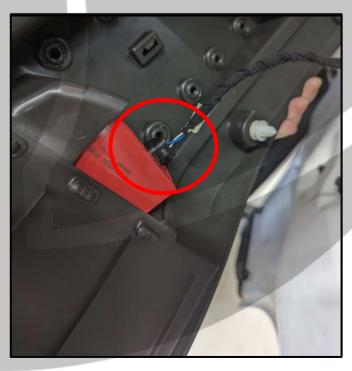

Tools required:




17. Door panel removed

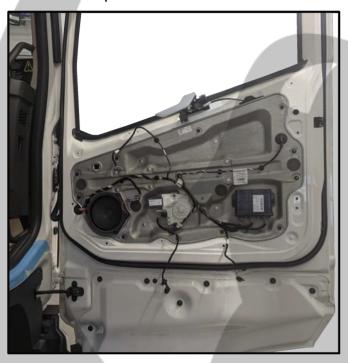

19. OEM speaker removed



18. Unscrew OEM speaker

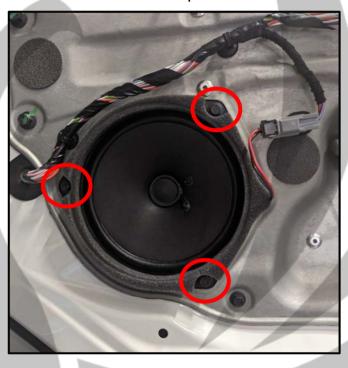

20. Mark drill holes for the next step






21. Drill up the markings




23. Bring out filter and 6.5" driver



22. Drilled holes

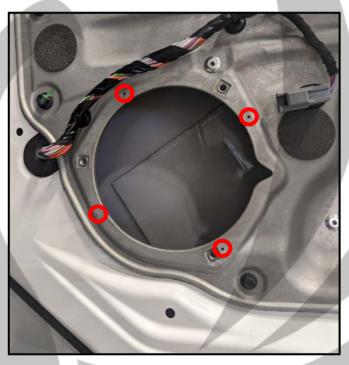

24. Connect cable harness to speaker

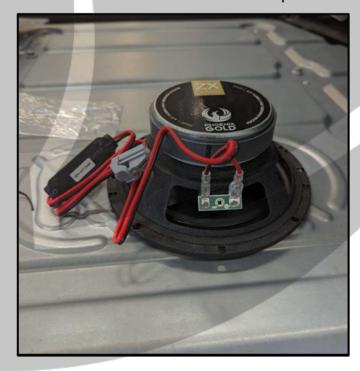



25. Screw speaker in place




27. Reassemble door in reverse order




26. Connect speaker connector




28. Go to the dashboard

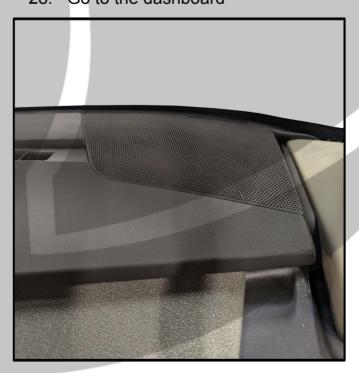

Tools required:



29. Remove the speaker grill

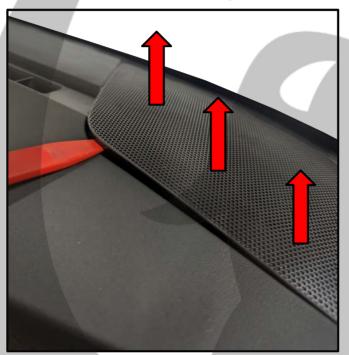

31. Pull up the dashboard panel



30. Speaker grill removed



32. Dashboard panel removed



Tools required:




33. Unscrew the two screws



35. Pull up the dashboard



34. Unscrew the screw

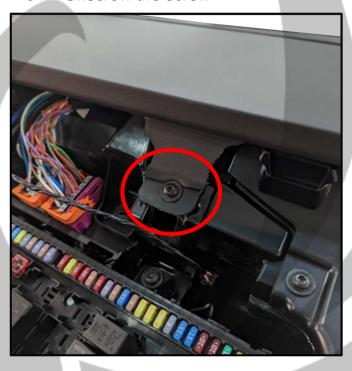


36. Unscrew the screw



Tools required:



37. Unscrew the two screws

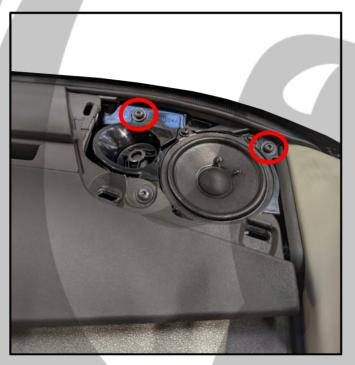

39. Disconnect the speaker connectors



38. Lift up the speaker bracket



40. Remove OEM tweeter



41. Bring out the tweeter




43. Mounting adapter removed



42. Unscrew the mounting adapter




44. Mount the tweeter

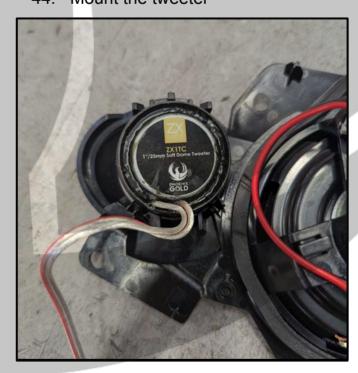







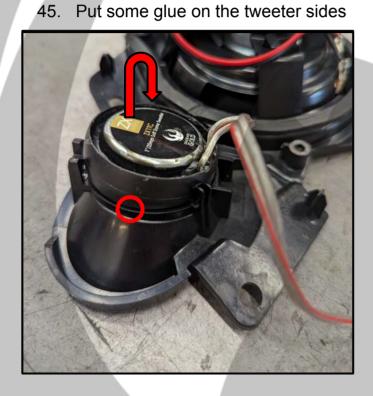


46. Unscrew the midrange speaker

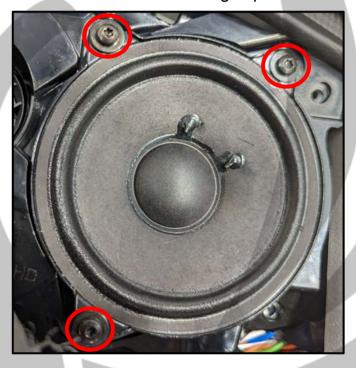


47. Connect tweeter filter

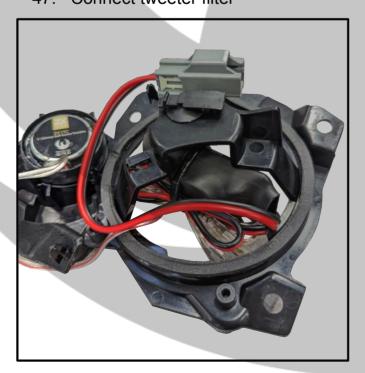

48. Cable tie filter in place

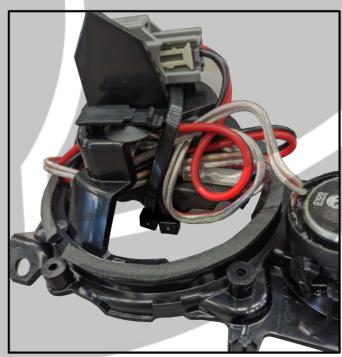




49. Screw speaker bracket in place



51. Left side tweeter grill removal



50. Reassemble panels in reverse order

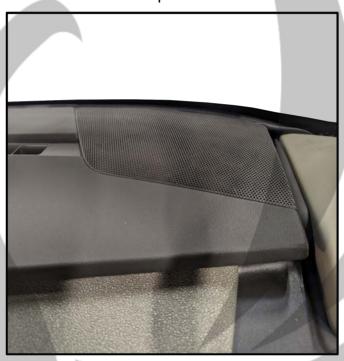


52. Pull up the tweeter grill



Tools required:



53. Unscrew the two screws

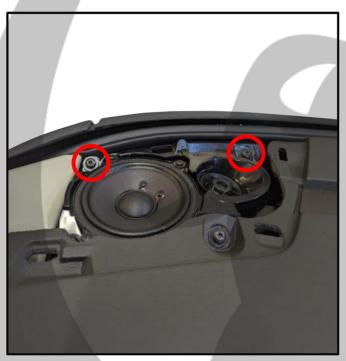


55. Disconnect the speaker connectors



54. Unscrew the screw



56. Repeat steps 40 to 48

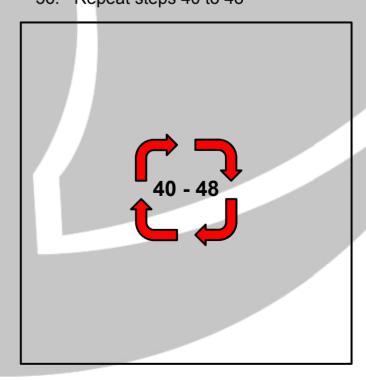



57. Screw speaker bracket in place



58. Reassemble panels in reverse order



59. Installation is complete



On Behalf of the Phoenix Gold team, Thank you for choosing us!

Your installation is complete and we hope that your new upgraded system will bring you joy and happiness for many years to come when listening to your favorite music. As always, our goal is bringing you The Gold Standard in Sound.

