



Thank you for your purchase of a spec.dock iPod solution for your vehicle. Audio connections may vary according to your particular setup. For any clarification on your particular vehicle, please email info@2point5.com or call 770-414-6038 with any further questions.

spec.dock Audi B6/B7 v2 Installation Instructions



Using Audi-specific radio removal keys, remove the radio from the dash by pulling toward you after the four locks have been disengaged. The radio fits very tightly into the opening even when the locks are released.



Disconnect all plugs from the back of the factory radio, remove and set aside. MAKE SURE THAT YOUR RADIO IS NOT CODED OR THAT YOU HAVE THE CODE BEFORE DISCONNECTING POWER.



Remove the climate controls by pressing on the back of the housing. The climate controls will unsnap and slide toward you. Be careful not to scratch the ashtray door while removing.




Disconnect all plugs from the back of the climate control housing. MAKE SURE THAT THE VEHICLE'S IGNITION REMAINS TURNED OFF UNTIL THESE ARE RECONNECTED LATER.



Unsnap the trim around the shifter by lifting up firmly on the back and front of the trim piece until the clips release.



With the shift boot unsnapped and lifted out of the way, you will see two 8mm screws holding the ashtray carrier in place. Remove these and set aside.

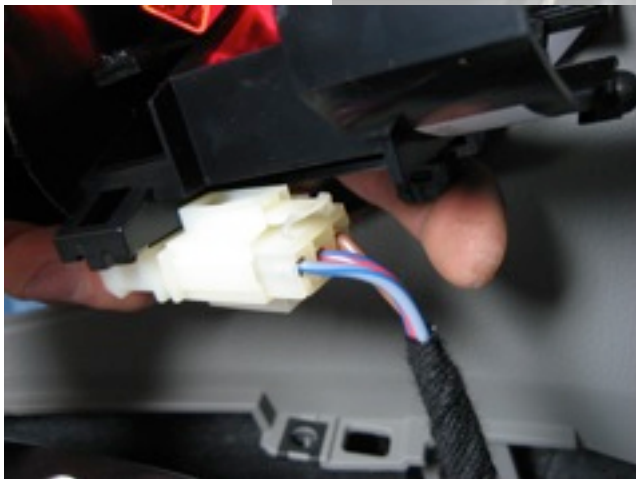

You will now be able to lift the ashtray carrier out of its location. Make sure to disconnect the lighting connector (and the cigarette lighter connector - B7 only) on the backside of the ashtray carrier to remove fully.



Hole location here for B6



Hole location here for B7

In the spot indicated, drill a 3/4" hole for the spec.dock's wiring to pass through the ashtray carrier.



Route the wiring from the spec.dock through this hole before reinstalling the ashtray carrier in the car.



Remove the backing from the double-sided tape pre-installed on your spec.dock (B7 shown for illustration) prior to dropping the spec.dock into position. You'll want to make sure that you've thoroughly cleaned the inside of the ashtray housing with a high-quality degreaser such as denatured alcohol.



Lower the spec.dock into place until it snaps in (B6 shown for illustration). The ashtray carrier can now be reinstalled and the wiring routed to the necessary location. Reassembly is the opposite of disassembly. Make sure to test all functionality before fully reassembling the vehicle.