



Thank you for your purchase of a spec.dock iPod solution for your vehicle. Audio connections may vary according to your particular setup. 2point5 recommends having your spec.dock integrated by a certified professional installer. For any clarification on your particular vehicle, please email info@2point5.com or call 770-414-6038 with any further questions.

spec.dock Audi TT v.2 Installation Instructions



Begin by reaching behind the switch panel in front of the shifter and lifting up gently using only your hand. This panel will easily begin to snap out of its location.



With the switch panel removed, unplug the three connectors on the backside of the panel and set aside.



Next, use your fingers to start unsnapping the clips on the front edge of the storage pocket that hold this piece in place, which were revealed when the switch panel was removed.



This will allow you to completely remove the storage pocket by lifting up and toward you. Make sure the door on the storage pocket is closed so that the entire unit will clear the surrounding dash trim.



Flip the storage pocket unit over and drill a small pilot hole in the location shown.




Enlarge this hole to 1/2" using a Unibit step drill bit or a hole saw.



The finished hole will look like this from the top side.



Route the cable integrated into the spec.dock through this hole.

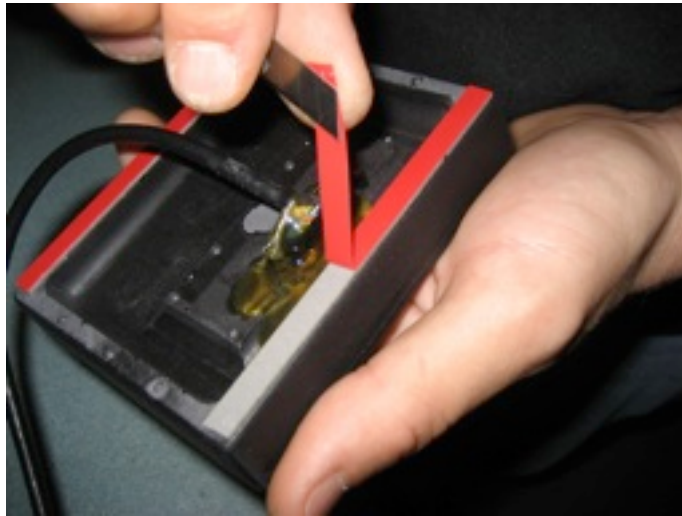

Remove the backing from the pre-installed double-sided tape on the spec.dock.



Lower the spec.dock into position while pulling through any remaining slack on the integrated cable and press down firmly to ensure proper adhesion. You will now be able to connect the spec.dock cable to your interface electronics and test all functionality before reassembling the vehicle interior. Reassembly is the reverse of disassembly.