

Connects2 BMW to Parrot Evolution user guide



NOTE : The original Keypad **MUST** be installed for the Connects2 adapter to work.
All pairing, Voice tag and Menu functions must be carried out from this keypad.

1. ANSWERING A CALL

Press the SPEECH BUTTON.

2. ENDING A CALL

Press the TELEPHONE BUTTON.

3. DISCRETE MODE

Press the SPEECH BUTTON during a call to switch call to handset, Press again to return to car.

4. REDIAL LAST NUMBER


Press and hold the SPEECH BUTTON for 2 seconds.

5. ACTIVATE VOICE DIALING

Short press of SPEECH BUTTON.

6. ADJUSTING VOLUME OF CALL

When call has connected the VOLUME KEYS will adjust the volume of the call.

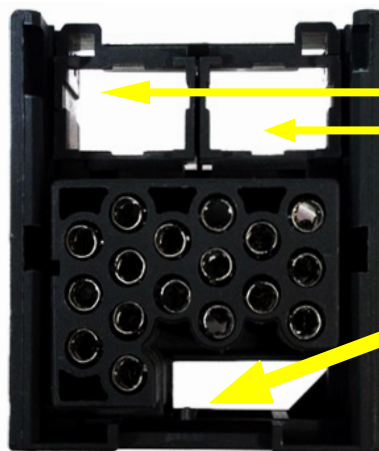

IF YOU HAVE A FACTORY FITTED BLUETOOTH PHONE SYSTEM ALREADY
INSTALLED IT MUST BE DISCONNECTED (REMOVE FUSE) FOR
STEERING CONTROLS TO WORK CORRECTLY.