



# CT23VL09/L

## Double DIN Fitting Kit for Volvo Vehicles



### IN THE KIT

- Double DIN Fascia Panel\*
- Radio Brackets

*\*Please note that the fascia pictured is the Right Hand Drive variant. The installation process shown throughout is also for RHD, but all processes will be similar for both Left & Right Hand Drive vehicles.*

### APPLICATION

*Note: Application data is subject to change at any time*

**Volvo XC60                      2008 - 2017**

*Note: this fascia is suitable for shallow mount units only. The dashboard will need to be modified for installation of a new unit.*

### FEATURES

- Allows for the installation of a double DIN aftermarket stereo
- Includes mounting brackets
- Finished in black to match vehicle dashboard

#### DISCLAIMER

*The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s. This instruction manual is based on documented data and research. The manufacturer of this product cannot be held responsible for any changes made to the vehicle by the manufacturer or damages that may occur through the installation of this product in accordance with the steps outlined herein.*

# PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are used during the installation to avoid damage to the vehicle or product. **Connects2 can not be held responsible for the installation of this product.**

## INSTALLATION GUIDE

### DASH DISASSEMBLY

1.



Begin by using a panel removal tool to remove the fascia trim panel.

2.




Disengage the CD slot plastic housing by bending in the clips on either side with a panel removal tool.

3.



With the trim panel and the CD slot panel removed, proceed to undo the 4x Torx screws highlighted. Once undo, pull the whole panel forward and disconnect all of the wiring.

4.

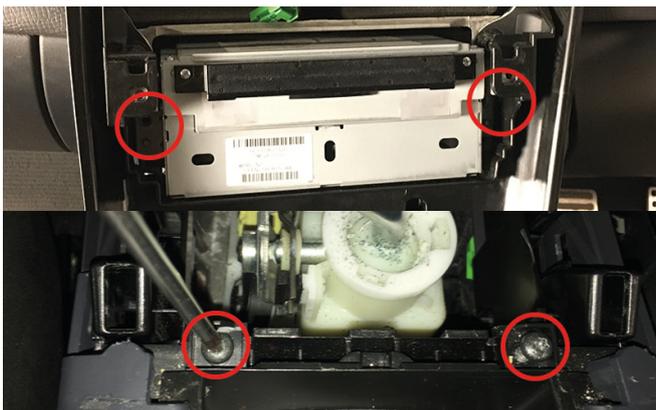

Once the main dashboard panel has been removed, proceed to undo the 2x recessed Torx screws either side of the main head unit, and the 2x screws down by the centre console.

# INSTALLATION GUIDE

---

## DASH DISASSEMBLY

---

5.



Before trying to pull out the inner trim, on the back of the inner dashboard frame are 2x screws. Remove these and then gently pry the inner frame away from the dash.

6.



With the inner trim removed, proceed to pull the main head unit out and disconnect all of the wiring.

7.



Remove the 4x screws that surround the top screen and remove completely whilst disconnecting all of the wiring.

## KIT ASSEMBLY

---

8.



Use the brackets that come with the kit and affix them to the relevant side of the new stereo. When attached, test fit within the dashboard to gauge the depth and alter accordingly.

# INSTALLATION GUIDE

## DASHBOARD MODIFICATION

9.



The highlighted section of dashboard frame will need to be cut in order to allow for a new double DIN unit to sit in place correctly.

***When performing any modification to the vehicle, always ensure to measure where the stereo will sit and take due care when performing cuts to the vehicle.***

***Connects2 always promotes the use and expertise of professional installers. Connects2 will not be held responsible for any damage to the vehicle.***

## DASH ASSEMBLY

10.



With the brackets affixed to the correct sides of the stereo and the dashboard modified, connect up the stereo and slot into place, screwing into place using the pre-existing screws.

11.



Once the stereo is secured, take the new fascia and place over the top, reconnecting the hazard switch in the process.